



FUEL SAVINGS CALCULATOR INSTRUCTIONS




The display is shipped as two main components: the Base and the Header.



Peel off the covers of the two adhesive strips on the back of the Base.



Slide the notches of the Header over the hubs located on the back of the Base.

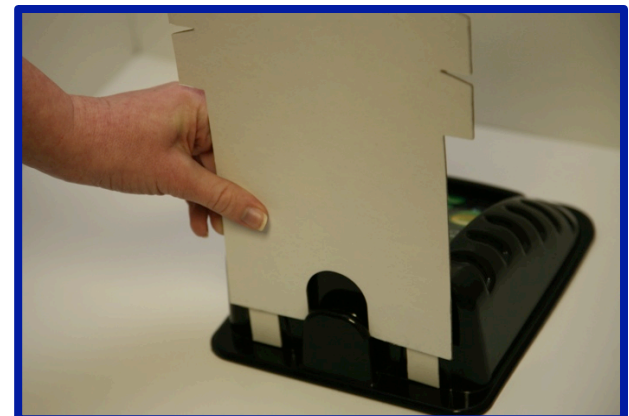

Press against the Header so that it fully adheres to the two adhesive strips.



If the batteries need to be changed, open the battery panel.



Remove the panel to access the four AA batteries, and replace with new batteries.